


# LINEAR TABLE POWER OUTLET

— Thomas Bentzen

CONTENT – CONTENU – CONTENIDO

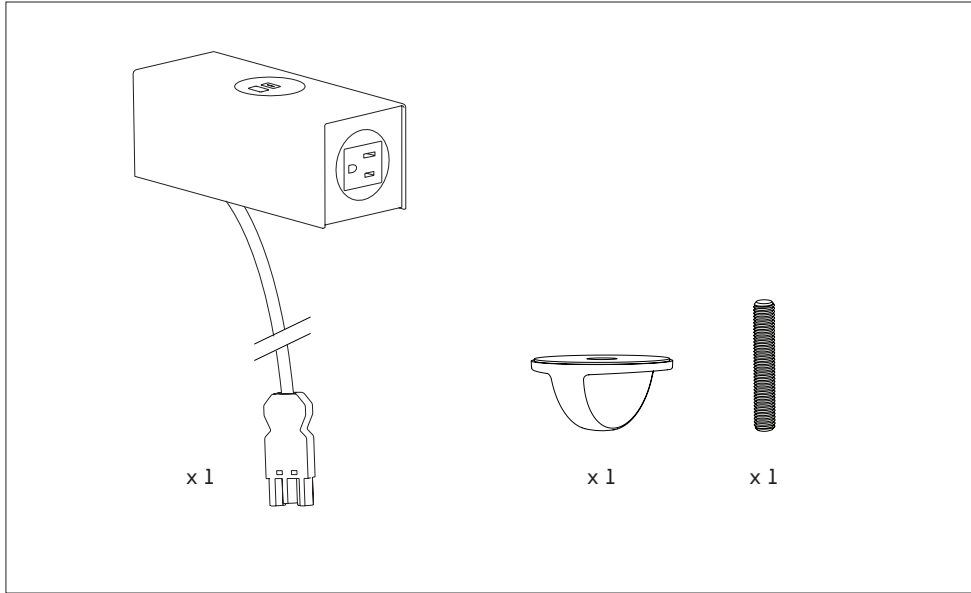

ASSEMBLY INSTRUCTION – INSTRUCTIONS DE MONTAGE – INSTRUCCIONES DE MONTAJE

RATED VOLTAGE: 125V  
 RATED CURRENT: 15A  
 INGRESS PROTECTION: IP20  
 CABLE TYPE: 14AWG SJT  
 OBSERVE LOCAL REQUIREMENTS FOR CONNECTION OF MULTIPLE UNITS  
 POWER SOCKET TYPE: NEMA 5-15R  
 MODEL NUMBER LPM-01  
 MAXIMUM CABLE LENGTH (FROM PLUG TO FINAL SOCKET) - 7,62M / 25 / 300"  
 MAXIMUM NUMBER OF LPM-01 UNITS TO BE FED FROM A SINGLE NEMA 5-15 PLUGGED POWER CORD - 4  
 NEMA 5-15 PLUGGED POWER CORD TO CONTAIN 15A OVER CURRENT PROTECTION  
 ETL LISTED (UL962A, CAN/CSA-C22.2 NO.21)


USB charging with 3-4 available supply voltage depending on the devices being charged.  
 Intelligent Device Recognition ensures that the device is charged at the optimal level  
 in the shortest time. Rated total output power (combined) = 25W

Charging current:  
 USB-A outlet max 18W (5V / 3A, 9V / 2A or 12V / 1.5A)  
 USB-C outlet max 24W (5V / 3A, 9V / 2.22A, 15V / 1.65A or 20V / 1.2A)  
 Standby power = 0.05W


Blue LED indication for USB-C when in standard fast charging mode (up to 5V)  
 Green LED indication for USB-C when in Power Delivery charging mode for devices  
 that accepts 9-20V providing the most optimal charge.




1

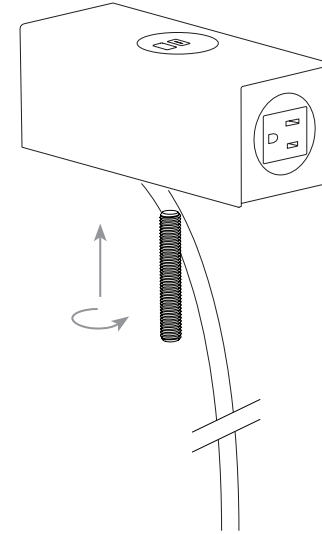


2

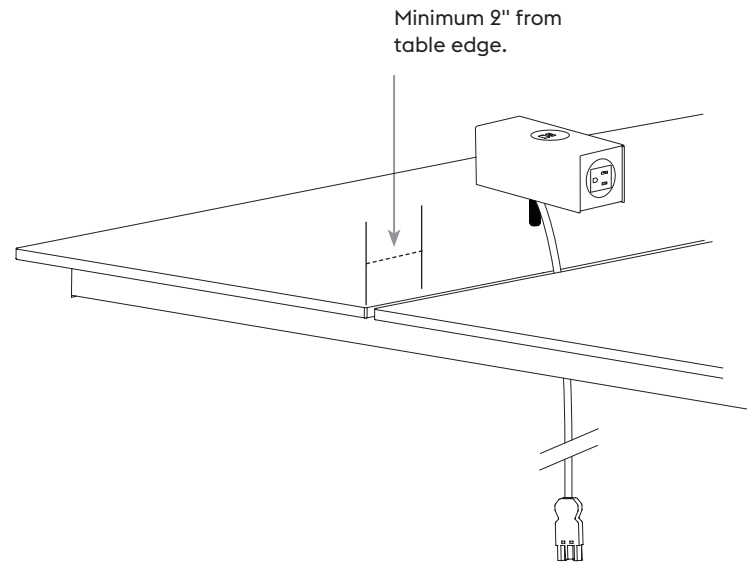


3

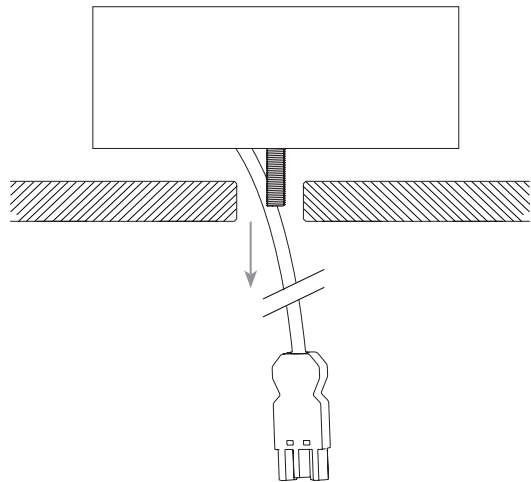


4

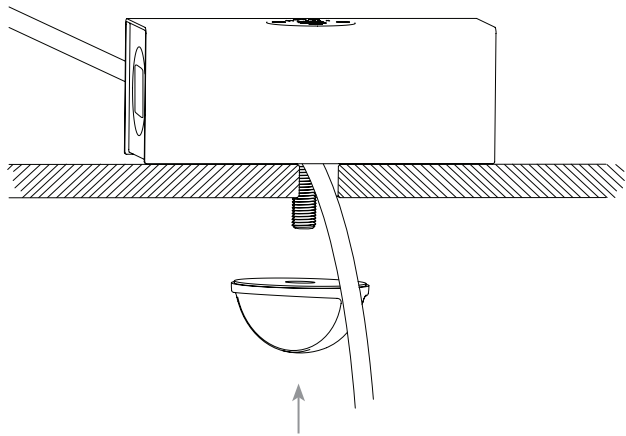


5

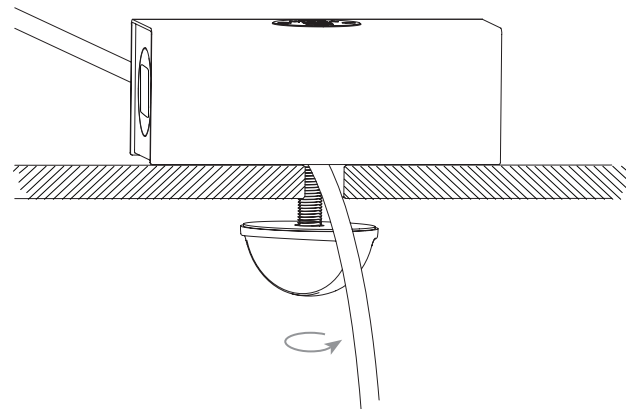

6

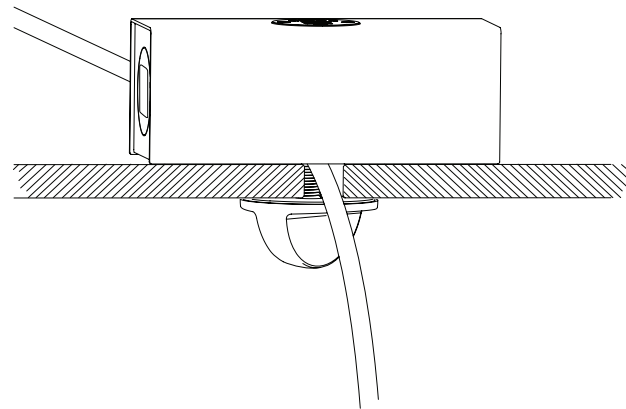


7

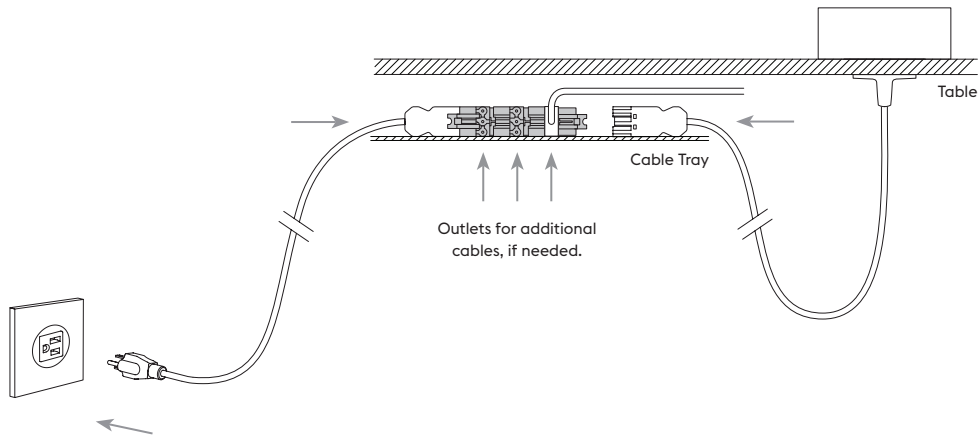

8

- EN To release the Wieland GST1813 plug from the distribution block, lift the latch indicated on the illustration by using a flat screwdriver or similar tool and firmly pull out the plug.
- FR Pour libérer la fiche Wieland GST1813 du répartiteur il faut soulever le loquet représenté sur la figure à l'aide d'un tournevis plat ou d'un outil équivalent et tirer fermement sur la fiche.
- ES Para sacar el conector Wieland GST1813 del bloque de distribución, levante el enganche indicado en la ilustración con un destornillador plano o una herramienta similar y tire del conector con firmeza.

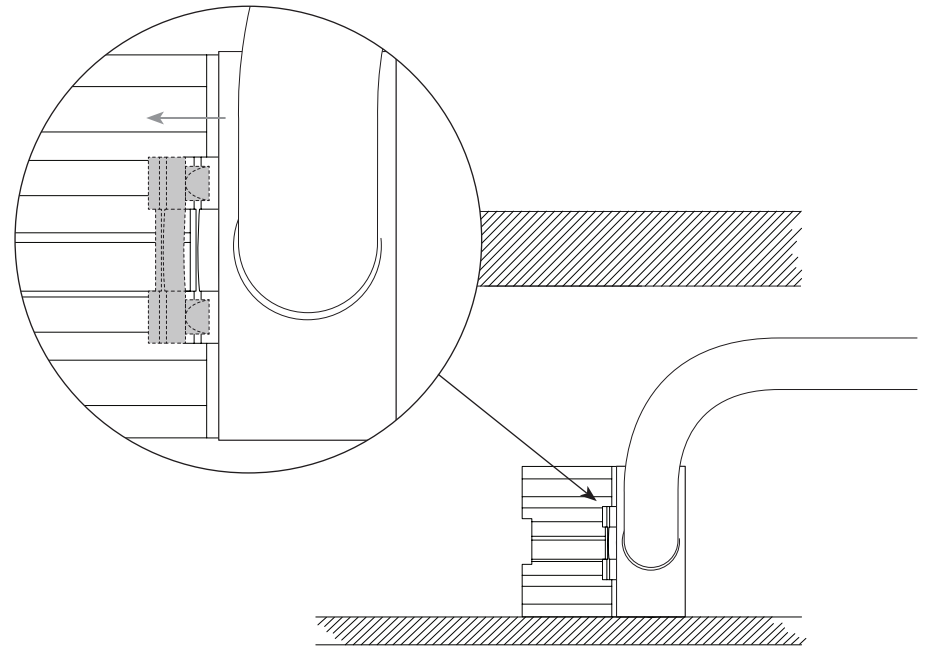

## CLEANING — NETTOYAGE — LIMPIEZA

- EN Turn off electricity, clean with dry cloth.
- FR Eteindre l'électricité, nettoyer avec un chiffon humide.
- ES Apague la electricidad, limpie con un paño seco.

## ATTENTION — ATTENTION — ATENCIÓN

- EN The external flexible cable or cord of this device cannot be replaced; if the cord is damaged, the device shall be destroyed.
- FR Le câble flexible ou le cordon d'alimentation externe de cet appareil ne peut être remplacé ; s'il est endommagé, l'appareil doit être détruit.
- ES El cable o cordón flexible externo de este dispositivo no puede sustituirse; si el cable está dañado, el dispositivo deberá ser destruido.